

DC120 Quick Start Guide


Lumens™

⚠ Important

* Please activate your warranty at www.lumens.com.tw/reg


* Please visit our website www.lumens.com.tw/goto.htm to download latest version of Software, Multilingual User Manual and Quick Start Guide.

1. Package Contents

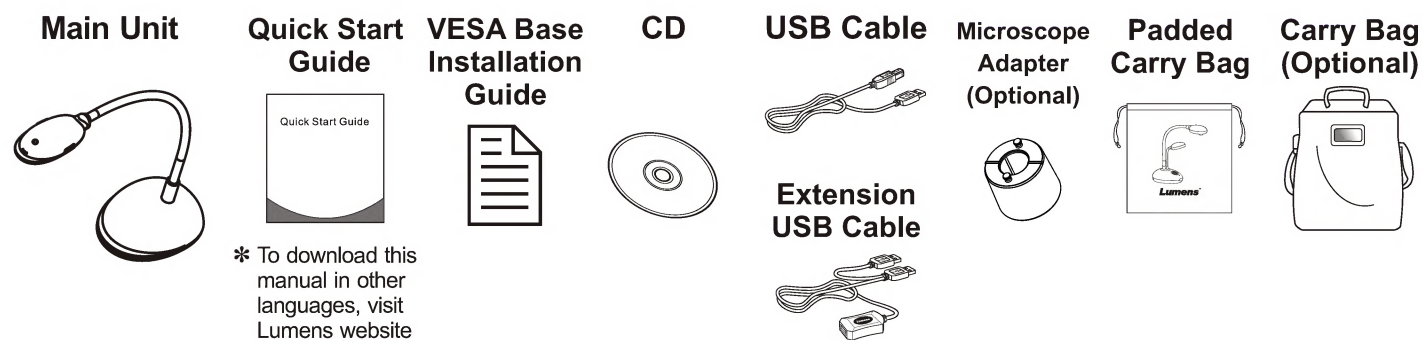


2. Installation & Connection

▼ Connect to a Computer

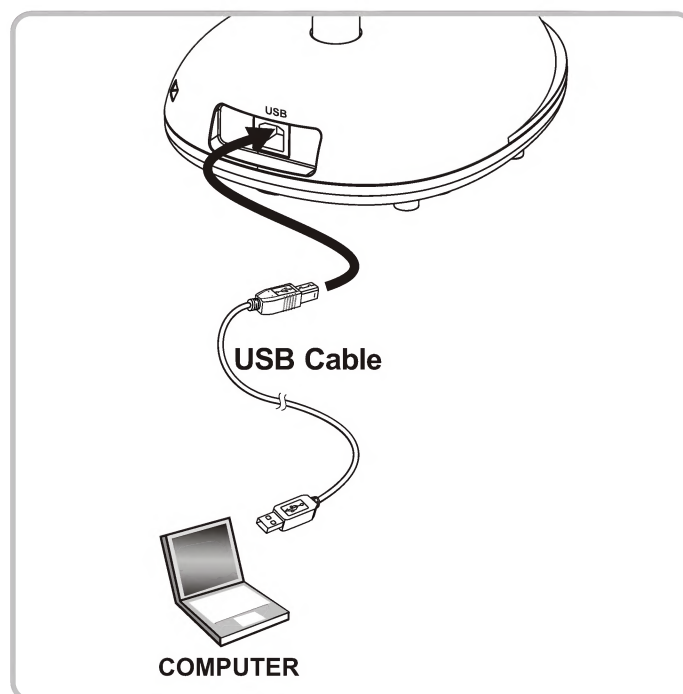




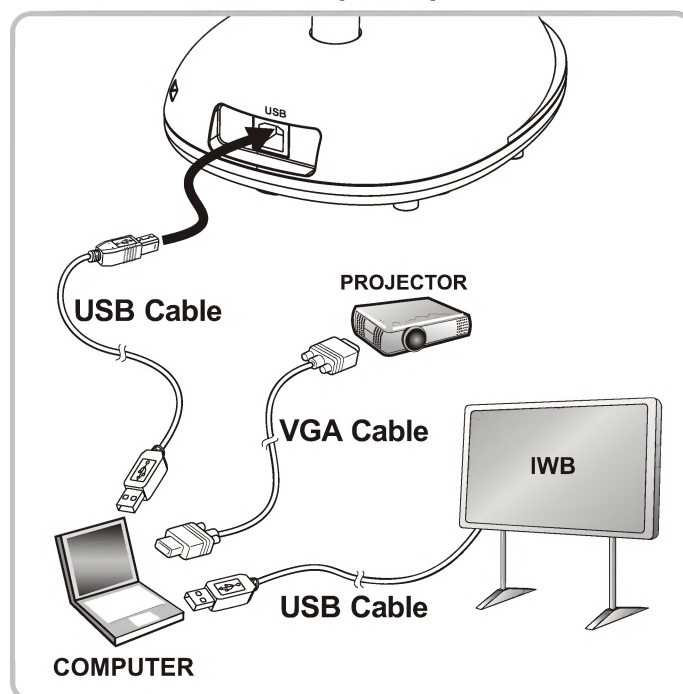

▼ Connect to an Interactive Whiteboard (IWB)

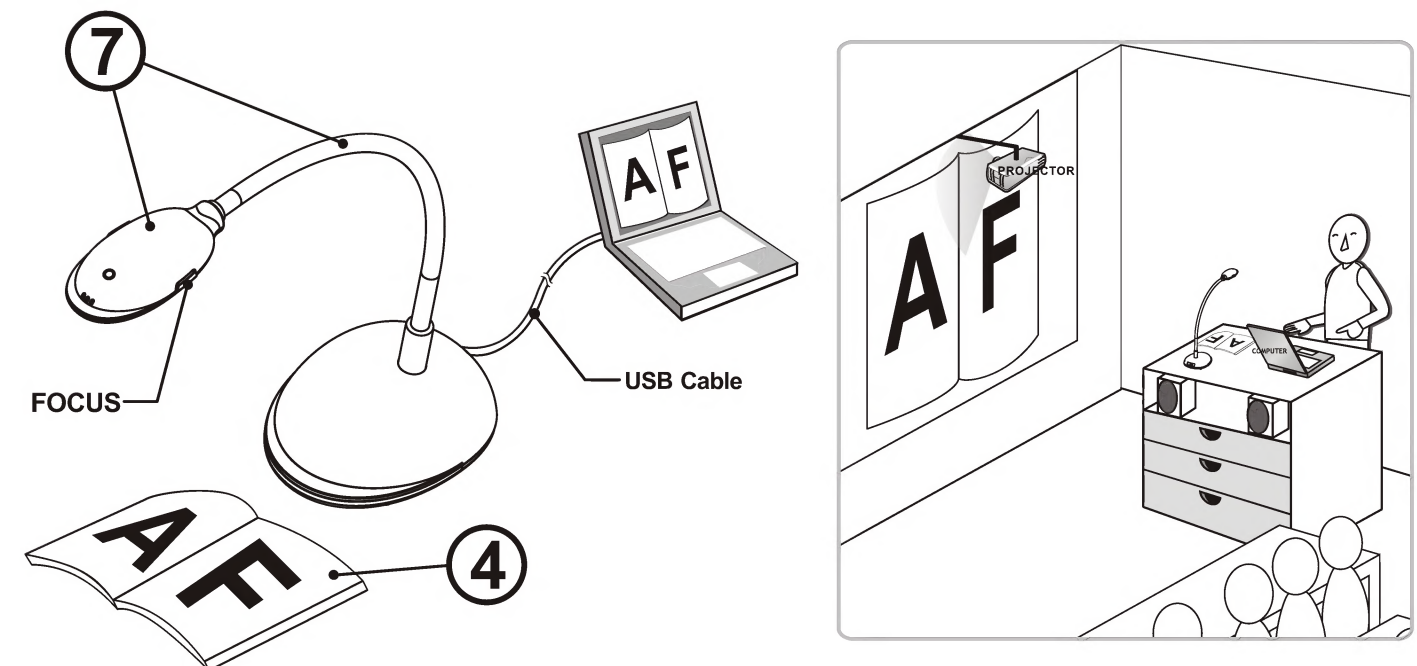

The power is on while USB is connected.

3. Getting Started



- ① Install your Ladibug™, please refer to opposite page [4. Ladibug™ Image software Installation](#).
- ② Double-click the [Ladibug]  icon to start your Ladibug™.
- ③ Mouse over the [Ladibug]  icon to select menu functions.
- ④ Place document or object to be displayed under the camera.
- ⑤ Click [PREVIEW]  to display the POWER Frequency setting page, and then follow the on-screen instructions for setting. The live video will be available after the setting is completed.
(*This setting is required only when you are using for the first time.)
- ⑥ Click [AUTO TUNE]  to optimize the image. You are ready to teach or present!
- ⑦ Reposition the gooseneck as needed and press the [FOCUS] button.

* Each time the camera head is moved, press the [FOCUS] button to refocus the lens.

* Please refer to the [DC120 user manual](#) for more operations.

4. Ladibug™ Image software Installation Instructions

Lumens™

▼ System Requirements


Windows XP	Windows Vista / Windows 7	MAC OS X 10.4 / 10.5 / 10.6 (32-bits Kernel)
<ul style="list-style-type: none">• Min CPU: P4 1.8 GHz• Min Memory: 512MB• Direct X 9 Compatible• Min Resolution: 1024x768• 100MB Min Disc Space	<ul style="list-style-type: none">• Min CPU: P4 2.4 GHz• Min Memory: 1GB (32-bits) /2GB(64-bits)• Direct X 9 Compatible• Min Resolution: 1024x768• 100MB Min Disc Space	<ul style="list-style-type: none">• Min CPU: PowerPC G4 866MHz or Intel Pentium® 1.83GHz Intel Core 2 Duo• Min Memory: 512MB• Min resolution 1024x768• 24-bit color display monitor• 1GB Min Disc Space• Min QuickTime 7.4.5

⚠ Very Important


- ✳ To ensure successful installation, please make sure each of the following steps is completed.
- ✳ The content of CD might be changed, please contact our distributors or check Lumens' website for download service.

➔ Windows XP / Vista / 7


1. Insert the software CD into your computer.
2. The Ladibug™ software installation program will automatically launch. Please select [Install Ladibug] to begin install ation.
3. Please read instructions, then press [Next].

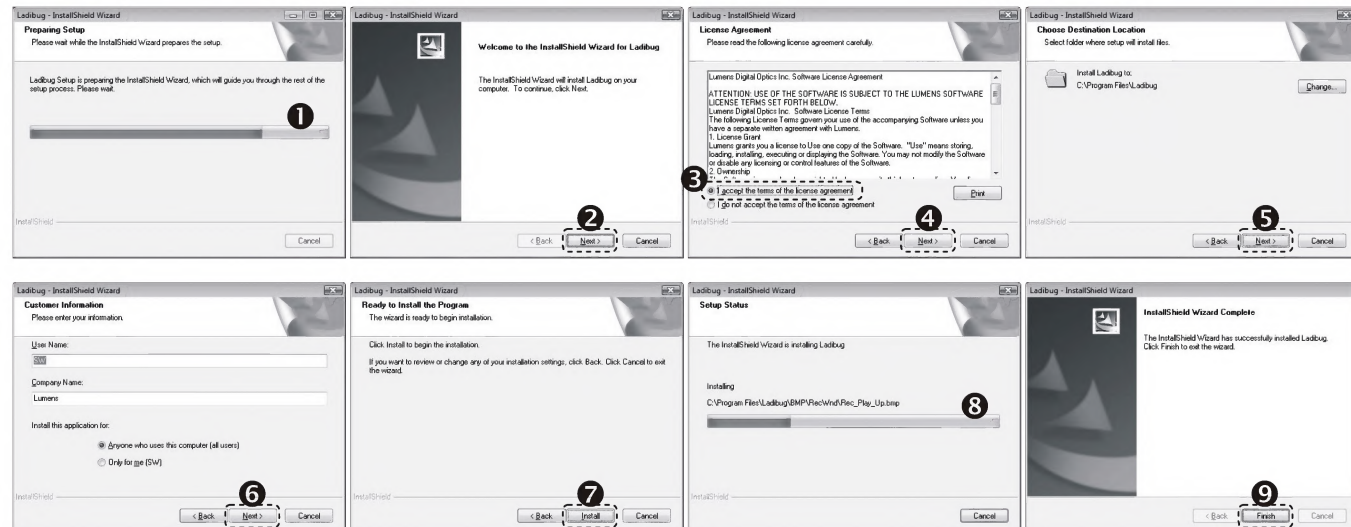

4. Press [Yes] to create a Ladibug™ shortcut on your desktop.

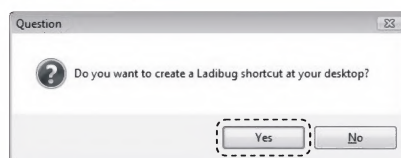

5. Please click the [Finish] button then reboot the system.

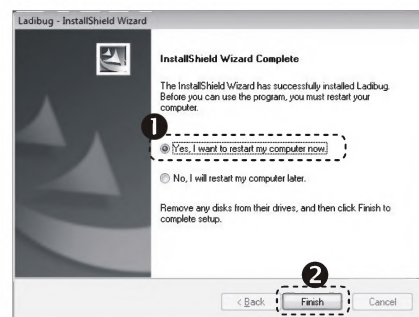


➔ MAC


1. Insert the software CD into your computer.
2. Click the CD icon when appears.
3. Select MAC folder and click [Ladibug] to begin installation.



4. Please follow the instructions and press [Next].

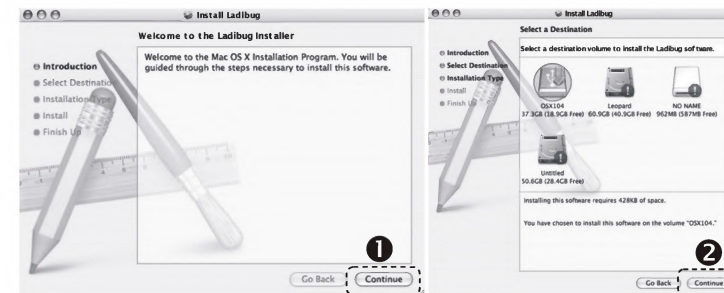


5. Click [Upgrade].

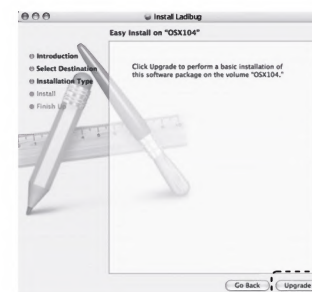

6. Enter your username and password, then click [OK].



7. Click [Continue].

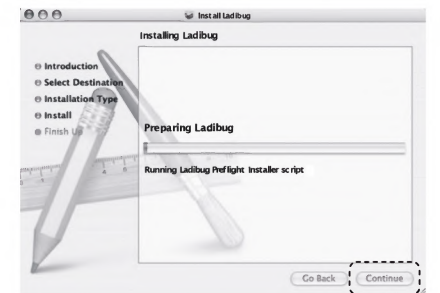

8. Click [Restart] to finish installing the software.

